




ZM 261

Solenoide para arranque

12V

Chevrolet Agile, Cobalt, Corsa, Montana,
Onix, Prisma, Spark, Spin

D. Remy 10535626, 10536526, 10538234,...

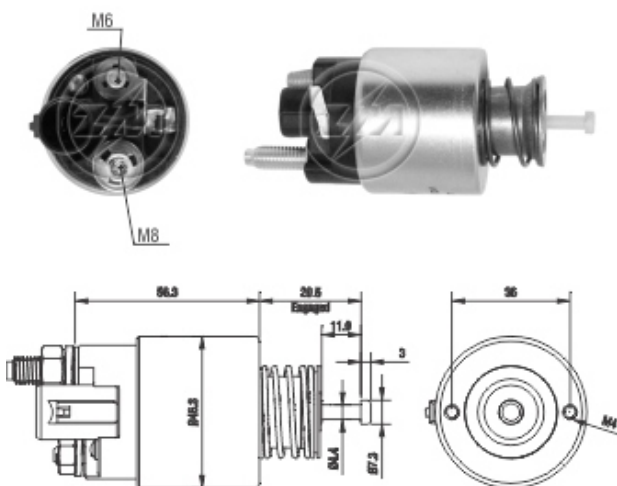


ZM 1-261

Solenoide para arranque

12V

Hyundai Azera, Santa Fe, Sonata, Tucson, iX35,
Kia Cerato, Forte, Magentis, Sorento, Sportage,...


D. Remy 25009, 8000285, 8000357, 96000,...

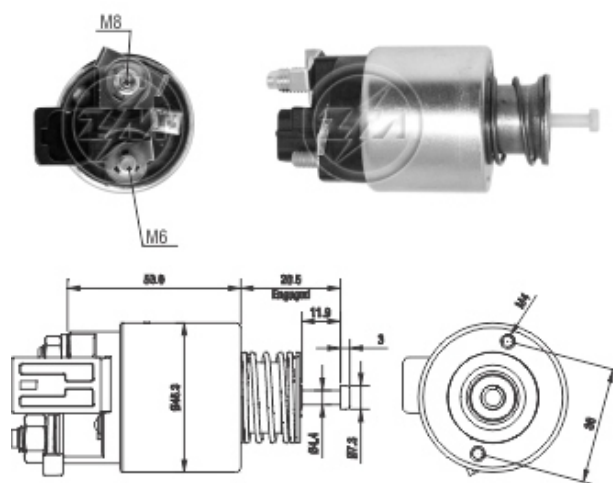

ZM 3-382

Solenoide para arranque


12V
Iveco Daily 2008, 2012>
Bosch 2339305231

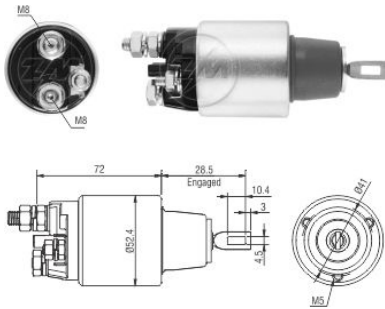

ZM 5-382

Solenoide para arranque


12V
Fiat Bravo, Doblò, Idea, Linea, Palio, Punto,
Strada - Bosch 2339305149

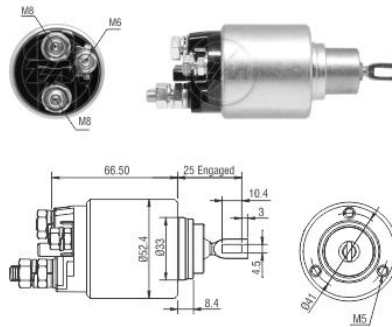

ZM 9-395

Solenoide para arranque


12V
A. Romeo Mito. Fiat 500, Bravo, Doblò, Idea,
Panda, Punto, Stilo. Lancia Delta, Musa, Ypsilon
M. Marelli 85541990

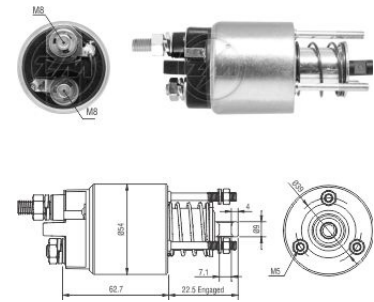

ZM 3-710

Solenoide para arranque

12V
A. Romeo Mito. Fiat 500, Albea, Bravo, Doblò,
Fiorino, Idea, Linea, Panda, Punto, Qubo, Siena,
Stilo. Ford Ka. Lancia Delta, Musa, Ypsilon
Arranque Fiat 51890631

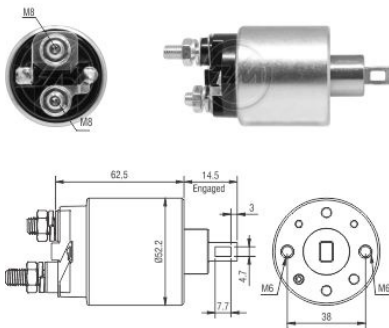

ZM 1-866

Solenoide para arranque

12V
Chevrolet Captiva, Cobal, Cruze, Equinox,
Trailblazer
D. Remy 10503939, 10518568

