


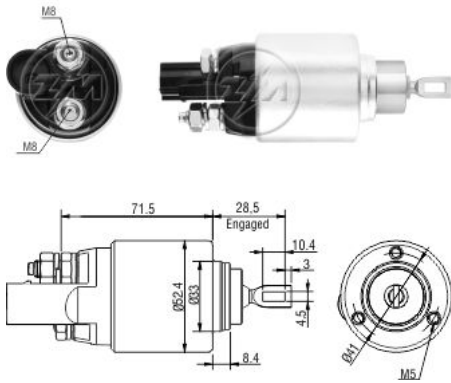

ZM 8-381

Solenoide para arranque


12V
Audi A3, TT, Seat Cordoba, Ibiza, Leon,
Toledo, Skoda, VW
Bosch 2339305055, 2339305077



ZM 4-382

Solenoide para arranque


12V
Citroen Berlingo, C4, C5, Jumper, Fiat Ducato,
Mitsubishi Outlander, Peugeot 206, 306, 307,
308, Partner...
Peugeot 583689

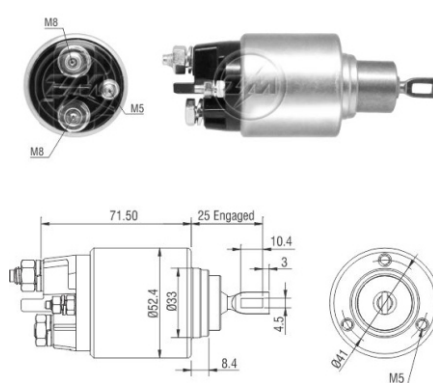

ZM 4-391

Solenoide para arranque

12V
Ecosport, Ka, Fiesta.
Valeo 501792

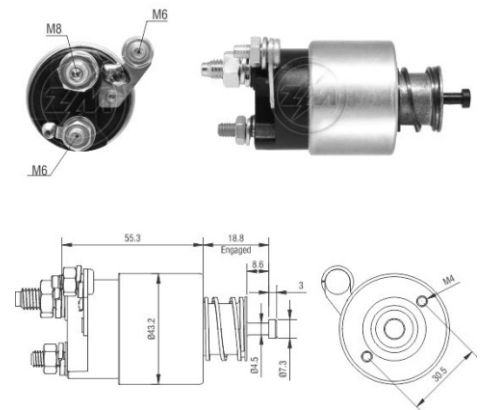

ZM 7-995

Solenoide para arranque

12V
Nissan March, Citroen C-Crosser;
Mitsubishi Outlander, Lancer...
Mitsubishi M371XD2071

